




Sony Handycam HDR-CX675 Lens Cover Panel Replacement

This guide will help remove the lens cover panel from the front of the Sony Handycam HDR-CX675.

Written By: Laith Al Hinai

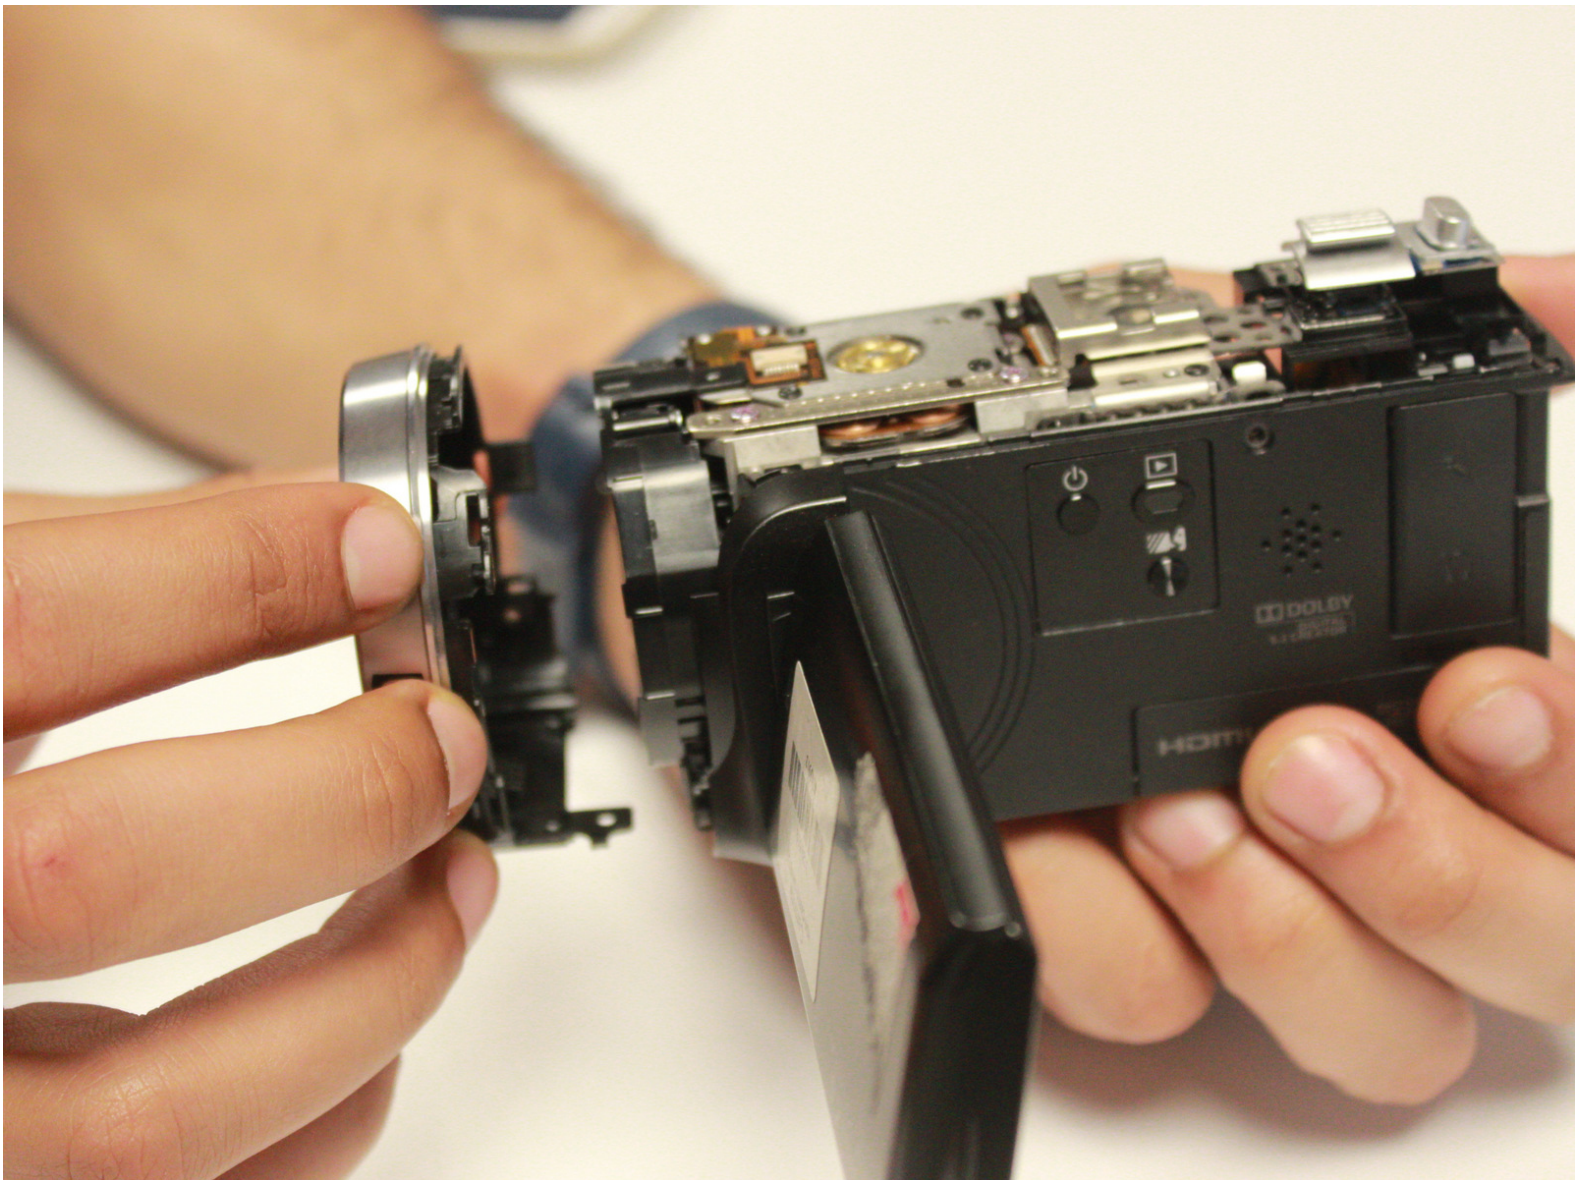

INTRODUCTION

This guide will help you remove the lens cover panel without damaging the device.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [JIS Driver Set](#) (1)
-

Step 1 — Camera Shell




- The battery should be removed and oriented upwards.

Step 2



- Remove the side 4.5 mm JIS #00 screw using JIS Screwdriver
- Remove the 5.5 mm JIS #00 screw.

Step 3

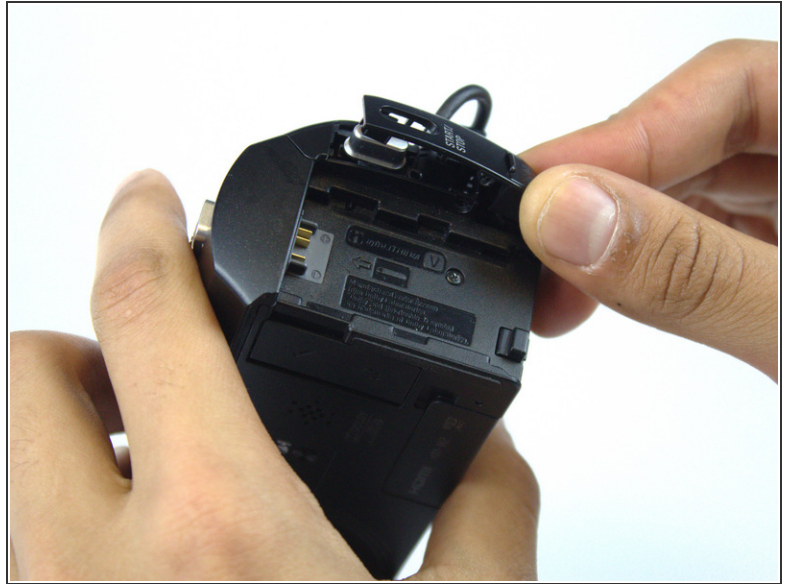

- Gently pry the plastic case surrounding the start/stop button free by using the blue plastic opening tools.
- Remove the casing using your thumb and index finger.

Step 4



- Turn the camera around and flip open the LCD screen to expose the side panel.
- Remove the 5.5mm #00 screw using the J00 head screwdriver.

Step 5



- Turn the camera to the handgrip side and unscrew two of the 5.5mm JIS #00 head screws using the JIS #00 head screwdriver.

Step 6




- Remove the two 5.5mm JIS #00 screws with the bottom of the camera facing up.

Step 7





- Turn the camera around in a way that the bottom of the camera is facing you.
- Use the blue opening tool to gently remove the camera shell off of the camera.

Step 8 — Lens Cover Panel

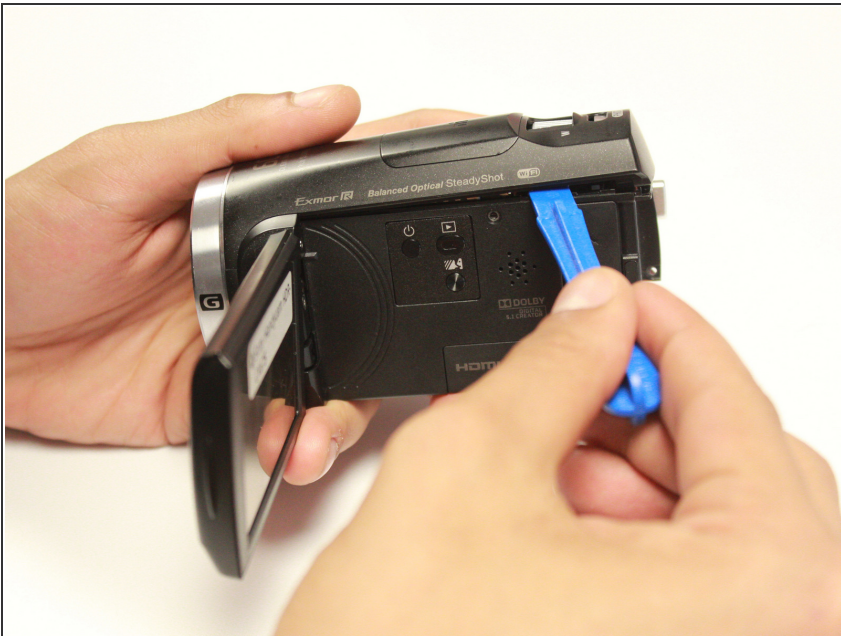

- Using the blue plastic opener smoothly to take the camera shell off.

Step 9

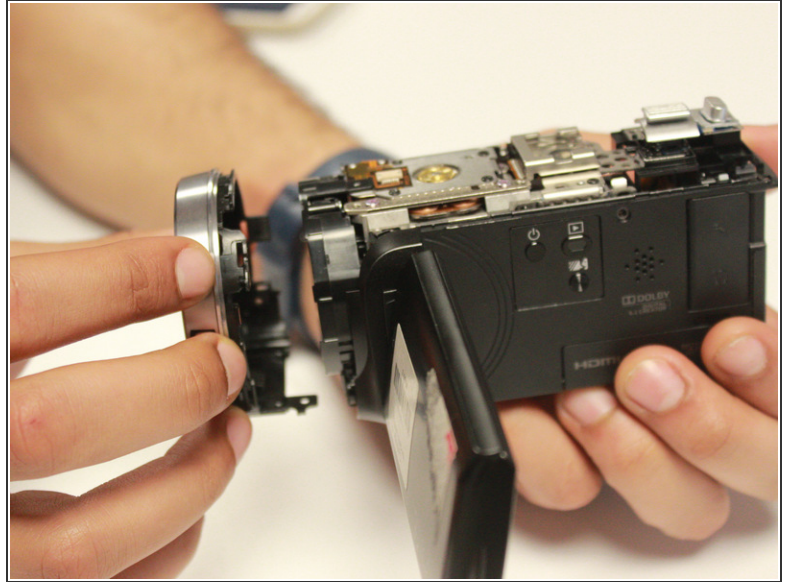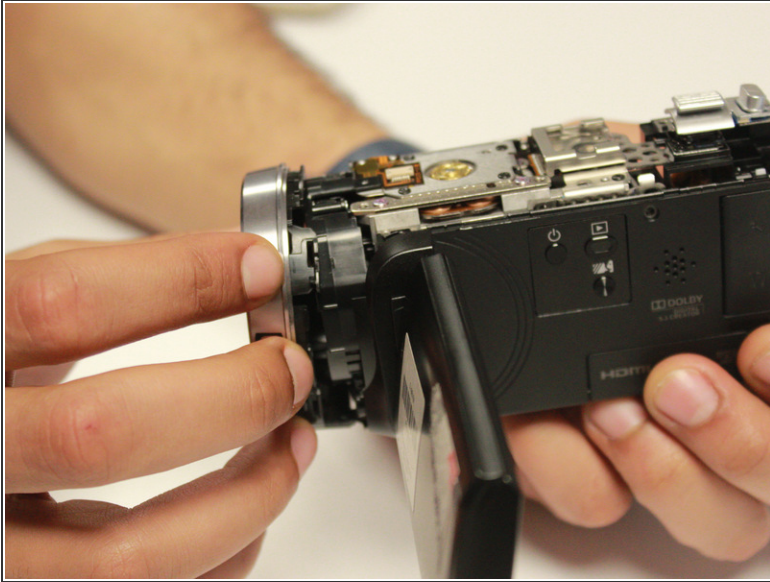

- Let the lens of the camera be pointed to your left.
- Keep holding the camera with your right hand then gently remove the lens cover panel with your left hand.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 10:02:44 AM.